



1996-1998 Acura TL Rear Speaker Replacement

This guide explains how to access the rear speaker by removal from the back seat and trunk.

Written By: Brayden



INTRODUCTION


This guide will show you have to access the rear speaker located behind the back seat headrest.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Socket Wrench](#) (1)
-

Step 1 — Rear Speaker

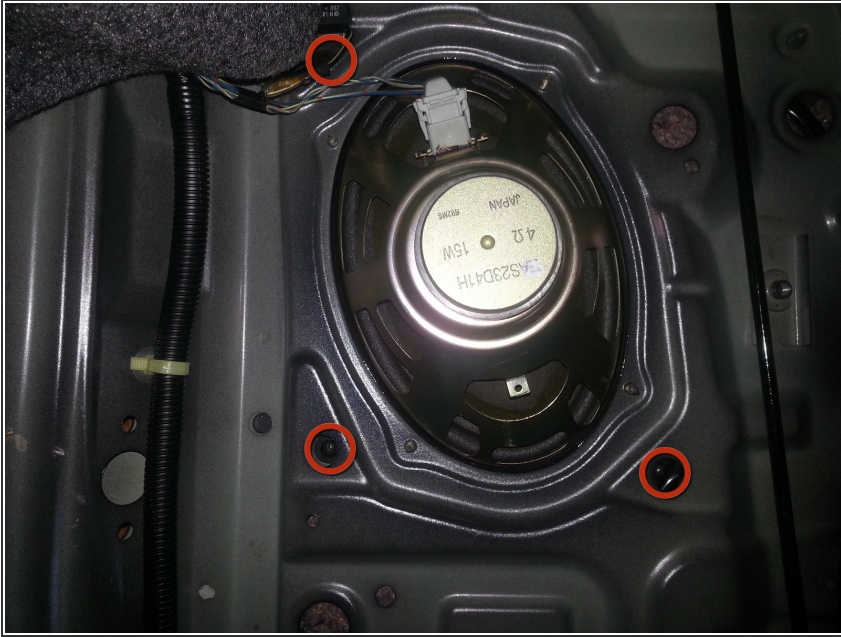

- Remove the three screws holding the speaker panel in place.

Step 2



- Disconnect the wiring harness in trunk.

Step 3



- Slide the speaker panel towards the center of car and pull it out.

Step 4



- Remove the four screws holding the speaker in.
- Lift the speaker out and removal is complete.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:01:24 AM.